


UNIQU USER MANUAL

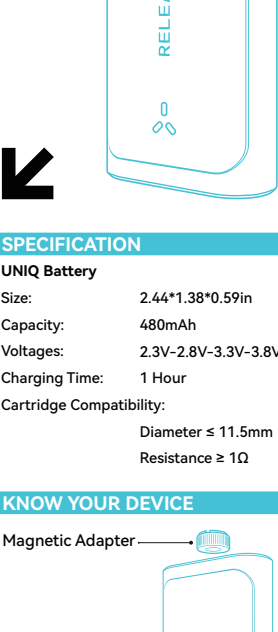


SPECIFICATION

UNIQU Battery

Size:	2.44*1.38*0.59in
Capacity:	480mAh
Voltages:	2.3V-2.8V-3.3V-3.8V
Charging Time:	1 Hour
Cartridge Compatibility:	Diameter ≤ 11.5mm Resistance ≥ 1Ω

KNOW YOUR DEVICE

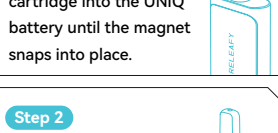

QUICK START

Note: Charge fully before using.

Step 1

Twist cartridge clockwise onto magnetic adapter (included), slide the cartridge into the UNIQU battery until the magnet snaps into place.



Step 2

Click the power button 5 times to turn on the battery, then click 3 times to cycle the voltages, and select the voltage you prefer.




Voltage Levels

● 2.3V	● 2.8V	● 3.3V	● 3.8V
---	---	--	---


Step 3

Hold the button down and start vaping.




Preheat Mode

Click twice to activate preheat mode, the battery will run at 1.8V for 10 seconds. To exit it, press the button one more time.



INDICATOR CODES

- **Working:** Light breathes in the color of current voltage level
- **Charging:** Light breathes in the color of current battery life



- **Fully Charged:** Light off
- **Short Circuit:** 4 red light flashes
- **Open Circuit:** 3 white light flashes
- **Low Voltage:** 10 red light flashes

WARNING

- Do not overcharge, which might lead to short battery life.
- Do not use the device when charging.
- Pause using the battery for 3 minutes if the device gets too hot when using.
- Keep the device away from any environment with high temperature, high humidity, flammable or combustible materials, strong acids, water, or other liquid.
- Keep away from any person under legal smoking age, and pets.
- Improper use, disassembly, or modifications to the device voids the warranty and could cause damage or physical harm.

DISCLAIMER

RELEAFY products are not intended for persons who are not of legal age according to the state and/or federal law, not for non-smokers, children, pregnant women, and breast-feeding women, and not for persons with or at risk of diseases like heart disease, high blood pressure, diabetes, mental disease, etc.

RELEAFY products are not intended to diagnose, treat, cure, or prevent any disease or medical condition. If you are pregnant, nursing, taking medication for a medical condition, or suspect you have a medical condition, please consult your physician before using any RELEAFY product.

WARRANTY TERMS

RELEAFY provides repairs or replacements to the original purchase of RELEAFY products under warranty according to the following terms and conditions:

1. This warranty provides free repairs or replacements for defective RELEAFY-branded battery parts within 365 days from the date of purchase.
2. The following circumstances are NOT covered:
 - The warranty card or the original receipt of purchase are not provided;
 - Any damage caused by improper operation or unauthorized maintenance and repair;
 - Merchandise failure or damage caused by use with non-RELEAFY branded components or by repairs carried by third parties;
 - Consumable items and attachments (including but not limited to: mouthpiece, heating coils, or chambers, magnetic adapter, etc.) are not covered, and can only be replaced if they are not working out of the box.

3. In no event will RELEAFY and RELEAFY distributors be liable for any CONSEQUENTIAL or INCIDENTAL damage arising from the use of the product, nor for injury to any person, or any misuse of the product or batteries.

RELEAFY reserves the right of final decision in all warranty cases.

RELEAFY may interpret and revise the content of the warranty terms.

For more information, technical support and customer service, reach out at support@releafy.com or visit our website www.releafy.com.

